

# DUMBLOID<sup>TM</sup> SSS

## 2000 Anniversary

### Owner's Manual

This machine is the unit Pre-Boost Circuit in a FET INPUT.

#### INPUTS

FET: Input to Drive circuit via FET-Pre Booster circuit. Boost level can be set by internal trimmer.

NOR: Normal input. This input avoids FET-Pre Booster.

Both inputs cannot be used at the same time.

Run a cable from your guitar to the Input. When running the pedal by battery, the power will be on when you plug in. The DC power jack works prior before others.

#### DC9V IN

Use a general 2.1mm×5.5mm 9VDC negative center power supply.

Tips: Use 006P battery or regulated power supply for better sound and low noise.

#### BRT SW.

Bright switch.

#### DEEP SW.

Low-Mid tone shift switch.

#### JAZZ/ROCK SW.

JAZZ Mode: Sound soft and attack calm. Rock Mode: Sound of the original straight overdrive.


#### ACCENT

Presence and post gain control. If it raises, it will become a hard and modern sound.

Input impedance : 1M~3.3MΩ Output impedance : 10kΩ Consumption current: 12mA Hand made in JAPAN

#### Wiring Configuration

Select input  
 FET or NORMAL.  
 Cannot use both  
 Inputs.

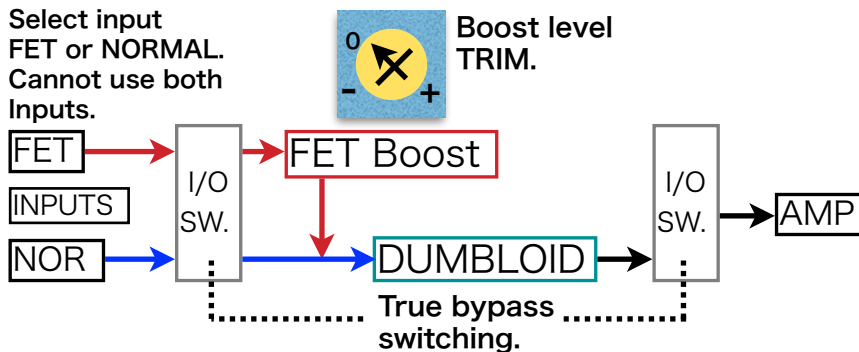

#### SAMPLE SETTINGS

