

Owner's Manual

www.shinsmusic.com

INPUT

Run a cable from your guitar to the Input.
When running the pedal by battery, the power will be on when you plug in.
The DC power jack works prior before others.

DC9V IN -  +9VDC

Use a general 2.1mm×5.5mm 9VDC negative center power supply.
Tips: Use 006P battery or regulated power supply for better sound and low noise.

DRV

Overdrive gain control.


ACCENT

Presence and post gain control. If it raises, it will become a hard and modern sound.

Input impedance : 1MΩ Output impedance : 10kΩ Consumption current:8mA Hand made in JAPAN

SAMPLE SETTINGS


FAT PREAMP

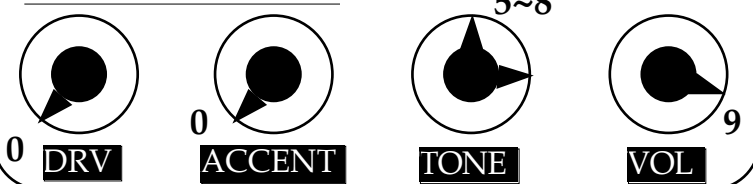

FAT PREAMP

A sounds like the tube amp and in which it is smooth and extrusion is strong is obtained by connecting just before solidstate amps.
The condition of fat is adjusted by TONE.


LINE PREAMP

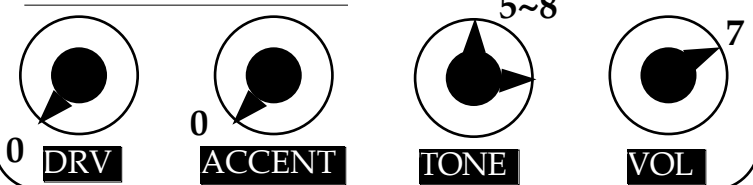

LINE PREAMP

Directions as preamp for line connection.
The case where it connects with a PC, and the time of a monitor by headphone.
The natural sound is obtained .


Blues Over Drive

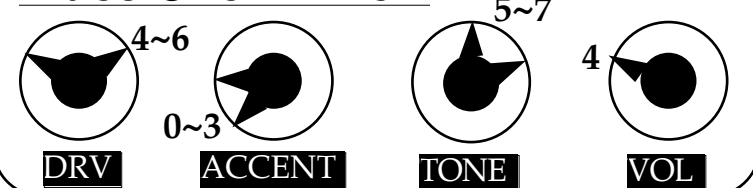

Blues Over Drive

Directions as a usual drive effector.
A smooth and fat drive sound is obtained which was made to drive by a tube amps.

FAT Heavy Drive

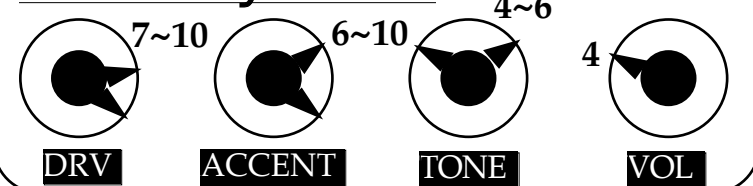

FAT Heavy Drive

Directions as a usual DRIVE effector.
Heavy, smooth and fat drive sound is obtained which was made to drive by a tube amps.
The condition of picking attack is adjusted by ACCENT.